

Goodlight™


LED 2D Replacement (Standard & Sensor)



This lamp requires a direct mains connection.

- 1 Disconnect mains power before installing or replacing lamp.
- 2 Use only correct input voltage (see diagram below).
- 3 Do not use with dimmer or electronic switches.
- 4 Remove/bypass existing ballast & starter, and connect as per wiring diagram.
- 5 Use only in dry locations.
- 6 Affix warning labels (supplied) to the fixture.
- 7 (Optional) A spring is supplied, which can be mounted onto the centre of the lamp for added support to the fitting.

WIRING DIAGRAM

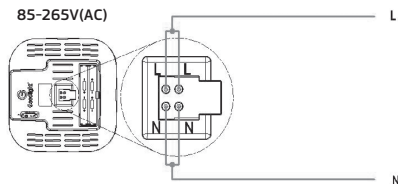

Manufacturer Notice: Failure to follow our installation guide will affect product performance, and invalidate your product guarantee. For any technical or installation queries please contact us on 0845 2183 786.

Created by

LEDECO
LIGHTS

Unit 7, J4 Camberley, 15 Doman Road
Camberley, Surrey GU15 3LB

info@ledicolights.com
www.ledicolights.com

T 0845 218 3786
F 01276 686 945